

SUPER SNIPER

M57

OWNER'S MANUAL



Users Restricted to
18 Years of age or older



More Accurate More Far

- > One Piece Precision Metal Barrel
- > Adjustable Hop-up System
- > High Power Pin-Point Accuracy Performance
- > Effective Long Range Shooting
- > Ultimate Bolt Action Airsoft Spring Rifle



WARNING:

Use 6mm BB Bullet


	DANGEROUS: NOT A TOY. Adult supervision required. Misuse or careless use may cause serious injury.
	FOR AGES 18 YEARS AND UP - Must be 18 years of age to purchase; minors require parent or legal guardian supervision to operate.
	EYE PROTECTION REQUIRED - Always wear eye and body protection to prevent injury. Do not fire at hard surface to prevent ricochet.
	READ INSTRUCTION BEFORE OPERATING - Follow safe handling procedures at all times. The purchaser and user should conform to all laws governing the use and ownership of airguns.
	DO NOT BRANDISH OR DISPLAY THIS PRODUCT IN PUBLIC - It may confuse people and may be a crime. Police and others may think it is a firearm. Do not change the coloration and markings to make it look more like a firearm. That is dangerous and may be a crime.

WARNING 注意



Always read through this manual before operation
使用前请阅读此说明书

- Thoroughly understand the warnings and cautions for safe operation.
为安全起见, 务须透彻理解警告及注意事项。
- Failing to do so may cause injury, accidents, or damage to the gun.
不当操作可能会引起伤害事故, 或损坏枪支性能。

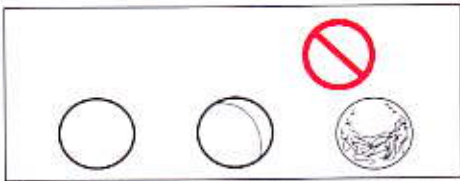

Always use precision BB Bullets for this air gun. Never use any used BB bullets.
请使用精密BB子弹, 不要使用任何使用过的BB子弹。



Never aim or shoot a person or animal as the target. Always set the selector on safety position except when you are ready to shoot a target.
不可把人或动物当作目标瞄准或射击。请把选择杆拨在安全档, 除非准备射击安全目标。



Do not brandish in public, do not alter the coloration and warnings-such an action is dangerous and may be a crime.
切勿在公众场合展示本汽枪, 它会引公众的不安。



There are cases that bullets remain in the gun after the magazine is disconnected, pulling the trigger carelessly is extremely dangerous. After towards a safe direction and fire to confirm that no bullets remain in the gun.
在取出弹夹后, 不小心扣动扳机仍有可能是危险的, 请将枪口对准安全方向, 扣动扳机以确定枪里没有残留子弹。



Do not look directly into the gun barrel to avoid accidental discharge of BB.
不要直接地看枪管, 避免BB弹意外发射。



Never hold the gun sideways as the BB bullets will curve right or left. This is due to the HOP-UP system.
切勿把枪支侧置射击, 因为上翻弹(HOP UP)功能会导致弹道偏向左侧或右侧。



Select a safe place for operating the air gun, avoiding places where people and cars pass cross or third persons are around.
选择一个安全的地方操作气枪, 避免在有人和汽车的路上操作气枪。



When you carry the air gun, attach the protective plug, set the selector lever to the safety position and put it in a case or bag.

当携带气枪时, 须把功能调杆到安全位置并且把枪放进袋子。

1 Component Chart

部件名称

Kit A (Receiver & Barrel):



Kit B (Stock):



- | | |
|--------------------------------|--|
| ① Fire/Safety Selector 发射/安全调杆 | ⑧ Hop-up Adjustment Hole Hop-up调节孔 |
| ② Trigger 扳机 | ⑨ Rear Sling Swivels 后背带环 |
| ③ Bolt Handle 枪栓拉柄 | ⑩ Magazine 弹盒 |
| ④ Upper Picatinny Rail 上战术导轨 | ⑪ Sling 背带 |
| ⑤ Barrel 枪管 | ⑫ Deluxe Spring Operated Speedloader 快速充弹器 |
| ⑥ Butt Stock 枪托盖 | ⑬ Screw Set and Allen Wrench 螺丝扳手套件 |
| ⑦ Magazine Release Button 弹盒卸钮 | |

Screw Set & Allen Wrench
 M6x65 Screw
 M3x15 Screw
 5mm Allen Wrench
 2.5mm Allen Wrench

Warning! Before you follow the assembly instruction, make sure to remove the magazine and set the Fire/Safety Selector to the "SAFE" position.
 警告! 装配操作前请务必移去弹盒并把射击/安全选杆拨在 "SAFE" 位置。



2 Assembly

装配

1. Install Kit A (Receiver & Barrel) into Kit B (Stock) as in Fig 2.1.
 如图2.1所示, 把套件A装入套件B中。

2. Lock Kit A into Kit B with screws provided as shown in Fig 2.1. Use the large Allen wrench for Screw A. Use the small Allen wrench for Screw B.

本产品配有螺丝A(2枚), 及三种规格的六角扳手, 如图2.1所示, 这些螺丝装入相应孔位, 并用相应的六角扳手锁紧(螺丝A用M5扳手)



Fig 2.1

3 Install Stackable Butt pad 安装可叠加式枪托调节片

The length of the rifle can be adjusted by reducing the thin butt pad. (Fig 3.1)

枪托长度可通过移去薄片枪托调节片来调整。

1. Disengage the Butt Pad Cover by loosening 2 locking screws.
旋开枪托后端2颗螺丝，拆开枪托盖。
2. Remove the thin butt pad, Put the Butt Pad Cover over the outer-most Stackable Butt Pad.
移去薄片枪托调节片。
3. Install and fasten the two Locking Screws.
装入枪托盖，锁紧2颗螺丝。



4 Setting the magazine 装入子弹

1. Load Bullets into Deluxe Spring Operated Speedloader.
把子弹装入快速充弹器。
- ① Open the Speed Loader Cap.
Insert 6mm pellets into the Speed Loader.
打开进弹盖，放入6mm子弹。

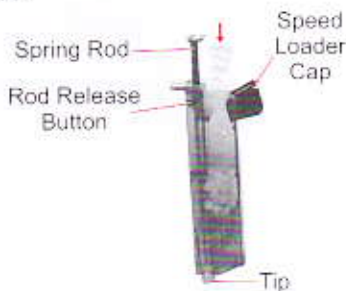


Fig 4.1

- ② Locate and push the Rod Release Button to release the Spring Rod. (Fig 4.1)
按下压弹开关按钮，释放弹簧压棍。
2. Feed Pellets From Speedloader into Magazine.
把子弹从快速充弹器压入弹盒中。



Fig 4.2

- ① Hold and disengage the magazine by pressing the Magazine Release Button. (Fig 4.2)
按下弹盒卸钮，卸下弹盒。(图4.1)

- ② Align The Tip of Speed Loader with the Pellet Drop of the magazine. (Fig 4.3)
把快速充弹器的出弹嘴对准弹盒的子弹入口。

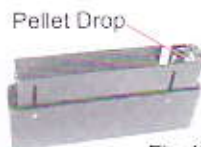


Fig 4.3

- ③ Push the spring Rod to load Pellets into the magazine.
Repeat this process until the magazine is full.
按下弹簧压棍，把子弹充入弹盒，重复此过程直至弹盒充满为止。
- ④ Insert the loaded magazine back into the rifle.
把弹盒插入枪体中。
- To remove magazine: Press the Magazine Release Button to disengage the magazine. (Fig 4.2)

5 Firing(Operate the gun after confirmation of safety) 射击(须确保安全环境才可发射)

- ① Set Fire/Safety Lever to "Fire" position. (Fig 5.1)
把发射/安全调节杆拨到"F"位置。
- ② Flip the bolt handle upward and pull it backward until it clicks. Then push it back to the original position to complete cocking in one continuous movement. (Fig 5.2 Fig 5.3 Fig 5.4)
把枪栓拉柄拨向上并向后拉至听到“咔嚓”一声,然后回位至初始位置,完成一个连续完整的上膛过程(图5.2、图5.3、图5.4)
- ③ Hold the gun firmly and rest the stock at a comfortable position.
稳固舒适地架好枪支。
- ④ Aim the rifle at your target and pull the trigger to fire.
瞄准目标,扣动扳机。



Fig 5.1

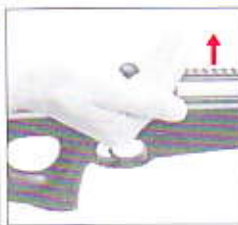


Fig 5.2



Fig 5.3



Fig 5.4



Activating the trigger carelessly is extremely dangerous. Never set the Safety/Fire Selector off the "SAFE" position or put your finger on the trigger unless you are ready to shoot at a target.

不小心扣动扳机是非常危险的,切勿把射击/安全选杆拨离"SAFE"位置,也不要把手指放在扳机处,除非你已准备射击。

6 Variable Hop Up System 可调式HOP UP系统说明

1. Adjust Variable Hop-Up System for Best Shooting.
调节HOP UP 系统。

- ① Locate the Hop-Up adjustment hole at the bottom of the Foregrip, front of the magazine. (Fig 6.1)
Hop-Up调节孔位于前护木底部,弹盒前方(图6.1)
- ② Rotate the Hop-Up adjustment hole by using the little wrench.
用小扳手旋转Hop-Up调节孔。
- ③ Shoot a few pellets, exam the trajectory and make further adjustment if necessary.
发射几发子弹,检查弹道,看看是否需再作调整。
- ④ The best positing is where the bullets fly horizontally, and the longest flying distance is obtained.
当子弹水平飞行且达到最远距离时即为最佳状态。

Hop-Up Adjustment Switch



Fig 6.2



Too much hop-up(Return the lever towards NORMAL)

Best Position

Not enough hop-up(Move the lever towards HOP)

7 Bipod Instruction

脚架说明

Learning the parts of your bipod

部件名称

Learning the names of the parts of your new bipod will help you to understand your owner's manual. Use this manual to increase your enjoyment of this bipod and your shooting experience.

了解脚架的各部分名称有助于你充分理解本手册的内容。

- | | |
|----------------------|------------|
| 1 .Connecting axis | 1. 连接轴 |
| 2 .Deployment knobs | 2. 展开/折叠按钮 |
| 3 .Legs | 3. 支架腿 |
| 4 .Telescoping knobs | 4. 支腿伸缩钮 |



Mounting and Removing Procedure

安装及拆卸

1. Insert the Connecting axis of the Bipod into the front hole of the Hand guard and a "click" sound will be heard.(Fig7.1)
轻轻把连接轴插入护木前端插孔,直到听一声“咔嚓”。(图7.1)
2. To remove bipod,press the Bipod Release Lever on bottom of the receiver,at the same time disconnect the bipod from the gun(Fig7.3)

移除脚架:按下脚架卸钮同时拔出脚架。(图7.3)



Fig 7.1



Fig 7.2

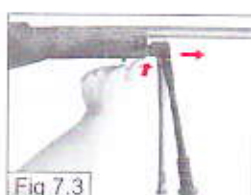


Fig 7.3

How to use the Bipod

脚架的使用

- To control the length of the bipod's two legs, simply loosen the knurled telescoping knobs,extend or retract the leg(s), then tighten the telescoping knobs to retain the adjustment.
若要控制脚架支腿的长度,只要反方向旋转支腿伸缩钮,支腿会伸长,然后旋紧按钮固定此长度即可。
- To fold the legs down for use, or up for stand-up play, simply slide the deployment knobs forward. This will release the legs' catch mechanism, allowing the legs to move to either position.
如要折叠收藏或直立使用,只需向下按下展开/折叠按钮,并收起或展开脚架的支腿。

How to Care for Your Bipod

脚架的保养

Keep the bipod away from harsh chemicals.

远离化学物品

Always use a soft cloth, moistened with alcohol to clean any dust or dirt from the bipod.

用蘸有酒精的湿软布擦去两脚架上的灰尘和污垢。

8 Maintenance


维护说明

1. Maintenance when Bullet Speed Becomes low 射出子弹速度变慢时的维护

- ① Apply Oil as shown below, using the cleaning rod and oiled cotton cloth. Insert cleaning rod into the barrel.
如下图所示,把棉布包扎在清洁棍上并喷上清洁剂,把清洁棍插入枪管中。
- ② To complete the cleaning, use the cleaning rod (with cotton) as shown below.
To remove excess oil.
清洗完枪管后,换上干净布条,清除枪管中多余油渍。

Warning 警告

- Always carry out maintenance AFTER returning the hop up lever to the Normal position. (Hop-OFF)
做此维护前请务必把HOP Up调至正常位置。

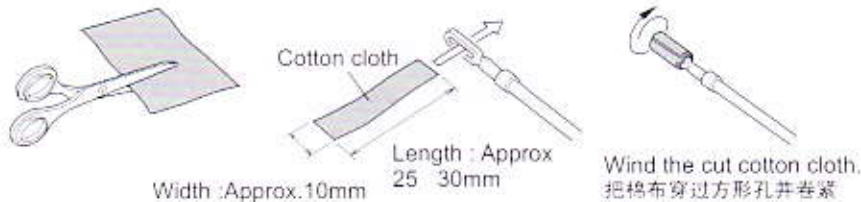

Hold at the leading end of the rod and insert the rod into the barrel while turning the rod.

握住清洁棍适当位置慢慢旋转同时逐渐插入到枪管中。



2. Removing clogged bullets 卡弹处理

- ① Remove the magazine and return the hop up adjustment to the Normal position.
如发生卡弹时,先卸下弹匣,将上翻弹(Hop up)功能键调至正常位置。
- ② Insert the cleaning rod from the load edge of the barrel, be careful so that the the angled part of the cleaning rod faces down, and remove clogged bullets.
把清弹棒插入枪管, (斜面向下), 子弹从弹盒插口退出。

3. Normal Maintenance 日常养护

- Keep the rifle in clean condition.
把枪支放置在清洁地方。
- Never used dirty, damaged or distorted bullets.
禁止用脏污的, 受损的或劣质子弹。
- Regularly clean the barrel with soft cleaning rod.
定期用洁净导棍清洁枪管。