

SPRING POWER

# M811

## AIR SOFT GUN



### OWNER'S MANUAL



### USE 6 mm BB Bullet

- MAGAZINE CAPACITY:800 BBS
- OVERALL LENGTH:830 MM
- VELOCITY:330FPS(0.12g)



### WARNING:

	<b>DANGEROUS: NOT A TOY.</b> Adult supervision required. Misuse or careless use may cause serious injury.
	<b>FOR AGES 18 YEARS AND UP</b> - Must be 18 years of age to purchase; minors require parent or legal guardian supervision to operate.
	<b>EYE PROTECTION REQUIRED</b> - Always wear eye and body protection to prevent injury. Do not fire at hard surface to prevent ricochet.
	<b>READ INSTRUCTION BEFORE OPERATING</b> - Follow safe handling procedures at all times. The purchaser and user should conform to all laws governing the use and ownership of airguns.
	<b>DO NOT BRANDISH OR DISPLAY THIS PRODUCT IN PUBLIC</b> - It may confuse people and may be a crime. Police and others may think it is a firearm. Do not change the coloration and markings to make it look more like a firearm. That is dangerous and may be a crime.


**Age: above 18**

# WARNING 注意




Always read through this manual before operation  
使用前请阅读此说明书

- Read through this manual before shooting, paying special attention for safe operation  
使用前请通读此说明书, 特别注意关于安全方面的操作。
- Failing to do so may cause injury, accidents, or damage to the gun.  
不当操作可能会引起伤害事故, 或损坏枪支性能。

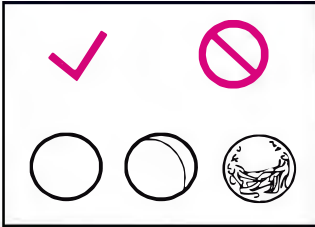


Always use precision BB Bullets for this air gun. Never use any used BB bullets.

请使用精密BB子弹。不要使用任何使用过的BB子弹。

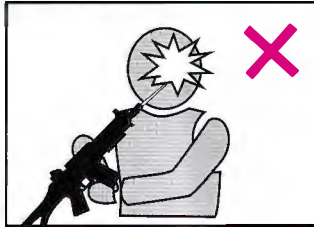


Do not look directly into the gun barrel to avoid accidental discharge of BB.

不要直接地看枪管, 避免BB弹意外发射。

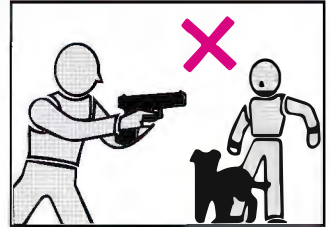


Do not brandish in public, do not alter the coloration and warnings—such an action is dangerous and may be a crime.

切勿在公众场合展示本汽枪, 它会引起公众的不安

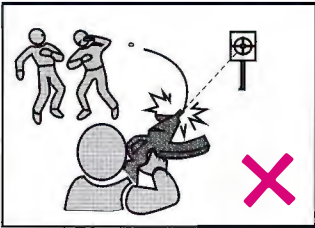


Never hold the gun sideways as the BB bullets will curve right or left. This is due to the HOP-UP system.

切勿把枪支侧置射击, 因为上翻弹(HOP UP)功能会导致弹道偏向左侧或右侧

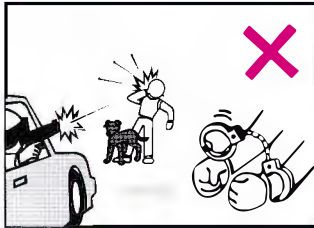

Never aim or shoot a person or animal as the target. Always set the selector on safety position except when you are ready to shoot a target.

不可把人或动物当作目标瞄准或射击。请把选择杆放在安全档, 除非准备射击安全目标。

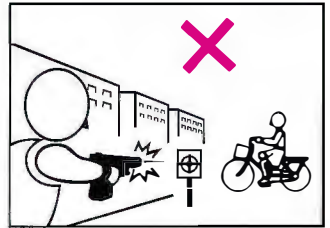


Select a safe place for operating the air gun, avoiding places where people and cars pass cross or third persons are around.

选择一个安全的地方操作气枪, 避免在有人和汽车的路上操作气枪。

## 1 Component Chart 部件名称

### 1. Learning the Parts of Your New Soft Air Gun.

Learning the names of the parts of your new soft air gun will help you to understand your owner's manual. Use this manual to increase your enjoyment of this soft air gun.

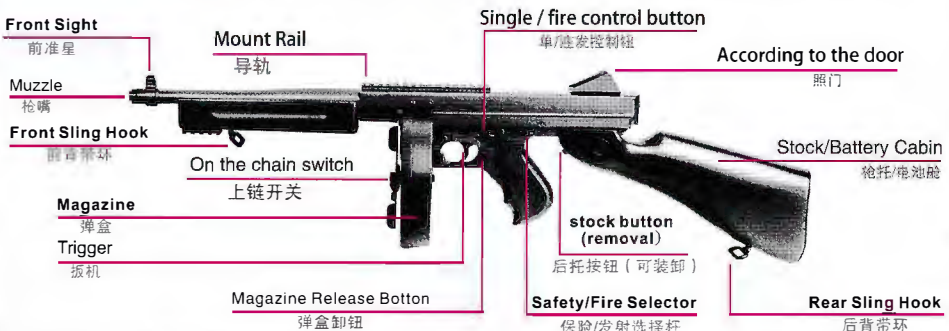

## 2 Operating the Safety 安全设置



Keep the soft air gun in the "SAFE" position until you are actually ready to shoot. Then push the safety to the "FIRE" position.

请把保险选择杆保持在“S”档位,除非已准备射击时才把其拨到“F”档位。

### 1. To take the Air Soft Gun "SAFE":

把保险选择杆设在“安全”档位

- Locate the safety on the Left hand side of the receiver, above the trigger. (Fig.2A)

保险选择杆位于枪体左侧。(图2A)

- Push up on the safety, toward the "S" on the receiver, until it stops.

把选择杆拨“S”位置

**WARNING** Like all mechanical devices, a soft air pistol safety can fail. Even when the safety is "ON SAFE", you should continue to handle the soft air pistol safety. NEVER point the soft air pistol at any person, NEVER point the soft air pistol at anything you do not intend to shoot.

**警告** 跟所有机械装置相同,本产品的安全按钮也可能失效。即使已把它设在保险档位,您仍需安全操作本汽弹枪。切勿随意瞄准任何人。

### 2. To take the Air Soft Gun "FIRE":

把汽弹枪设在“发射”档位

- Locate the safety on the left side and push down towards the "F" on the receiver, until it stops. The soft air gun is ready to fire when "FIRE". (Fig.2B)

把保险选择杆拨至“发射”位置,即可准备射击。(图2B)



## 3 Loading Plastic BBs 装入塑料BB弹



Use .24 caliber (6mm) plastic BBs only this soft air gun. Use of any other ammunition can cause injury to you or damage to soft air gun.

使用6mm塑料BB弹。使用其它子弹者可能引起人身伤害或损坏本产品。

### 1. Loading Plastic BBs 装入塑料BB弹

- Press the play button box unloading, remove the cartridge box. Pay attention to avoid the bomb box drop broken or hurt people, as shown in figure Fig. 3A

按下弹盒卸钮,卸下弹盒。注意避免弹盒跌落摔坏或伤及人身,如图Fig.3A

- Open the bomb box bullet hole cover, load bb. He flip on the bullet box hole. As shown in figure Fig.3B

打开弹盒子弹孔翻盖,装入BB弹。合上子弹盒孔翻盖即可。如图Fig.3B

- Insert the loaded magazine back into the bottom of the grip frame until you hear a click, indicating the magazine is securely locked into place. as shown in figure Fig. 3C

把弹盒从握把底部插入,直至听到“咔嚓”一声。如图Fig.3C

- Clockwise direction switch toggle on the chain, until you hear a "tick" sound, said bullet filled with.as shown in figure Fig. 3C

顺时针拨动上链开关,直到听到“滴答”一声,标示子弹装满。如图Fig.3D



## 4 Setting the Battery 安装电池

1. Find the battery compartment, along the arrow down to open the door.  
找到电池舱，沿着箭头往下打开舱门。

2. Pick a good line, put the battery into the battery compartment, closed the door. The following diagram.

接好线路后，把电池放入电池舱，关闭舱门。如图示。



## 5 A repeating device 连发装置

1. Struck a repeating device button to "SINGLE" as a single. As shown in figure A.

拨动连发装置按钮至“SINGLE”为单发。如图A。

2. The button to toggle a repeating device "FULLAUTO" for the fire. As shown in figure B.

拨动连发装置按钮至“FULLAUTO”为连发。如图B。



## 6 According to the door 照门

Gunsight, line of sight alignment as door and front sight and the target into a horizontal line.

射击瞄准时，视线对准照门与前准星及目标成一条水平直线。



## 7 Variable Hop Up System 可调试Hop up 系统说明

1. Locate the Hop-up Adjustment Knob at the right side of the receiver.

HOP-UP调节键位于枪体右侧。

2. Slide the Hop-Up Adjustment knob to a desired position.  
轻轻划动调节钮至期望位置。

3. Shoot a few pellets, exam the trajectoy and make further adjusment if necessary.

发射几发BB弹，检查弹道，看看是否需要再作调整。

4. The best positing is where the bullets fly horizontally, and the longest flying distance is obtained.

当BB弹水平飞行且达到最远距离时即为最佳状态。




## 8 Butt 枪托

1、Press the rear support unloading button, pull back the butt for unloading;

按下后托卸钮，往后拉枪托为卸下；

2、Press and hold the button bracket, rifle pushed forward mounted on.

按住后托按钮，把枪托往前推为装上。

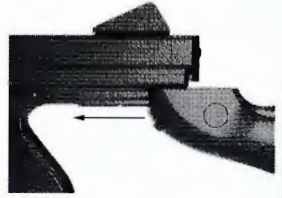

## 9 Maintenance 维护说明


1. Maintenance when bullet speed becomes low 射出子弹速度变慢时的维护

① Apply Oil as shown below, using the cleaning rod and oiled cotton cloth. Insert cleaning rod into the barrel.

如下图所示，把棉布包扎在清洁棍上并喷上清洁剂。把清洁棍插入枪管中。

② To complete the cleaning, use the cleaning rod (with cotton) as shown below. To remove excess oil.

清洁完枪管后，换上干净布条，清除枪管中多余油渍。

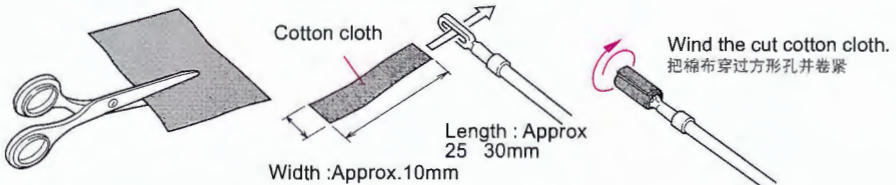

Cut the cotton to the size shown.

切一小块棉布，大小如图所示。



Hold at the leading end of the rod and insert the rod into the barrel while turning the rod.

握住清洁棍适当位置慢慢旋转同时逐渐插入到枪管中



### Caution 警告

- Always carry out maintenance AFTER returning the hop up lever to the Normal position. (Hop-OFF) 做此维护前请务必把HOP Up调至正常位置。
- Inserting the rod will be difficult if you hold rod at the end. 手握在末端将难于插进清洁棍

## 2. Normal Maintenance 日常养护

● Keep the rifle in clean condition. 把本产品放置在清洁地方

● Regularly clean the barrel with soft cleaning rod.

定期用洁净导棍清洁枪管

● Never used dirty, damaged or distorted bullets.

禁止用脏污的，受损的或劣质子弹。

**DOUBLE EAGLE PRODUCTS**

**Printed China**