

M904

Use 6mm BB Bellet

1/1 New Generation Airsoft Electric Gun

The All New FALCON Electronic Gearbox



WARNING:

 
	DANGEROUS: NOT A TOY. Adult supervision required. Misuse or careless use may cause serious injury.
	FOR AGES 18 YEARS AND UP - Must be 18 years of age to purchase; minors require parent or legal guardian supervision to operate.
	EYE PROTECTION REQUIRED - Always wear eye and body protection to prevent injury. Do not fire at hard surface to prevent ricochet.
	READ INSTRUCTION BEFORE OPERATING - Follow safe handling procedures at all times. The purchaser and user should conform to all laws governing the use and ownership of airguns.
	DO NOT BRANDISH OR DISPLAY THIS PRODUCT IN PUBLIC - It may confuse people and may be a crime. Police and others may think it is a firearm. Do not change the coloration and markings to make it look more like a firearm. That is dangerous and may be a crime.

Age: Above 18

WARNING

 Always read through this manual before operation


- Read through this manual before shooting, paying special attention for safe operation
- Thoroughly understand the warnings and cautions for safe operation

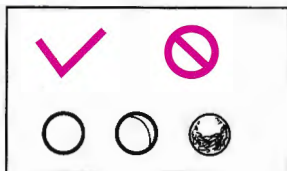

Always use precision BB Bullets for this air gun. Never use any used BB bullets.



 Do not look directly into the gun barrel to avoid accidental discharge of BB.

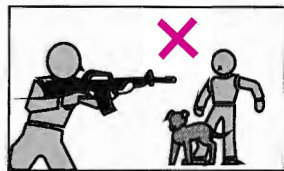


Never aim or shoot a person or animal as the target. Always set the selector on safety position except when you are ready to shoot a target.




Never hold the gun sideways as the BB bullets will curve right or left. This is due to the HOP-UP system.



 
Do not brandish in public, do not alter the coloration and warnings—such an action is dangerous and may be a crime.

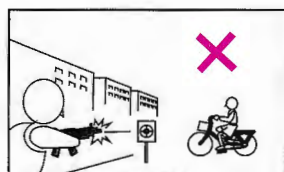

 Select a safe place for operating the air gun, avoiding places where people and cars pass cross or third persons are around.

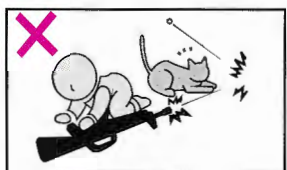

 Always remove the battery and store the air gun in a case or bag and at a place out of reach by children so that they will not be injured during mischievous play.

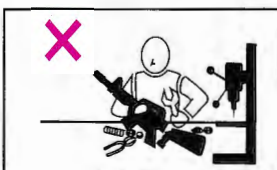

Disassembling or modifying the gun may generate danger or adversely affect the performance. So avoid disassembling or modifying the air gun.



There are cases that bullets remain in the gun after the magazine is disconnected, pulling the trigger carelessly is extremely dangerous. After towards a safe direction and fire to confirm that no bullets remain in the gun.

1 Charging the Battery (Battery and charger are Included)



Battery



Battery

 


Charger

CAUTION

- Use the correct battery and charger according to respective instruction manuals. We will not be held responsible for any accident or damage caused by wrongful operation or usage of non-specified battery.

2 Component Names (For details, see the following pages.)

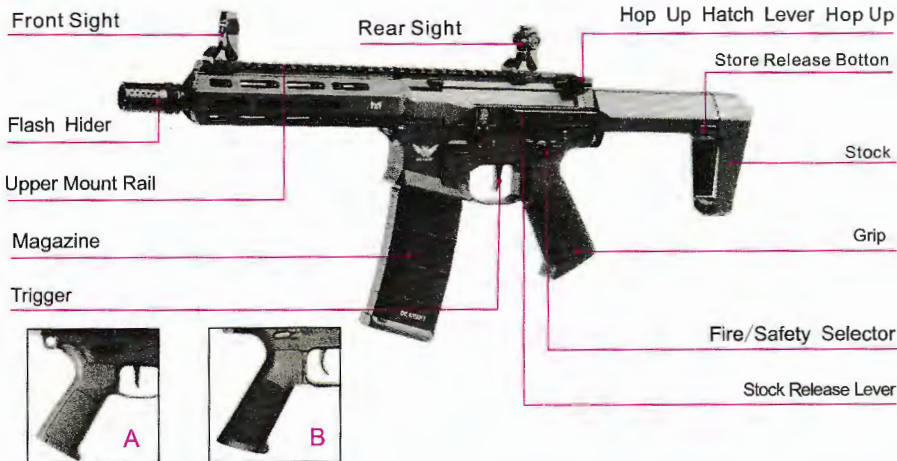


3 Selector lever and Safety Setting



Warning

 To prevent malfunction of the switch do not change the selector lever from semi to full auto while pulling the trigger.

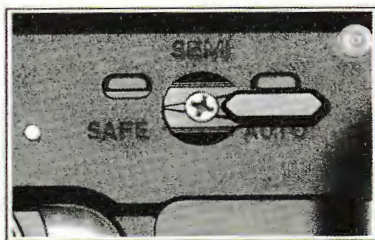

1 Safety Setting

Always set the lever to the Safety position and attach the protective cap when you are not firing the gun or during storage.



2 Semi auto (Single Shot)

The gun will fire one shot each time the trigger is pulled.



3 Full Auto (Automatic Firing)

The gun will fire automatically while the trigger remains pulled.

4 Firing (Confirm your shooting area is safe before beginning firing.)

- 1 Set the selector lever to "SEMI" or "FULL" position



 
Warning

- Charge the battery if the firing cycle becomes slow.
- Give the air gun a rest for 5 to 10 minutes after firing about 500 rounds, in order to ensure long service lives of the motor and battery.
- A blank firing may occur at triggering after setting the magazine, this is the normal operation of the gun.

- 2 Shooting With pull trigger


5 Setting the Mount Rail

- 1 Setting the short rails


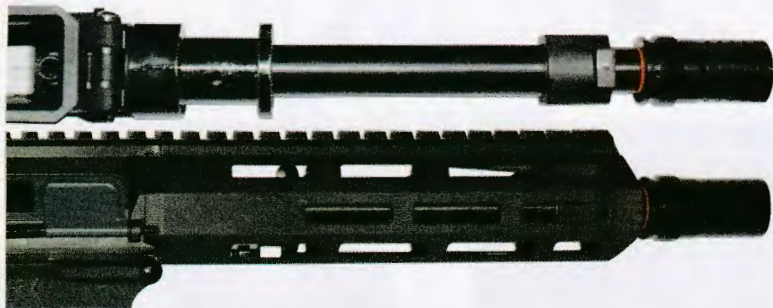


- Attach the short rails on the barrel and lock With the mount rail regulator

 - 2 Atetting the long rails

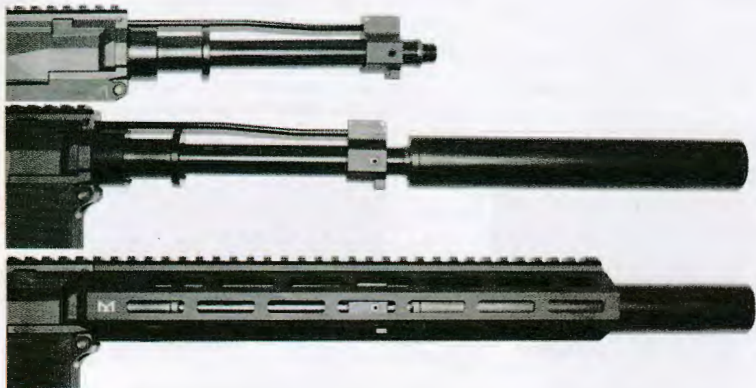

  - Setting the tracer on the barrel,put on the long mount rail,then lock with the mount rail regulator.

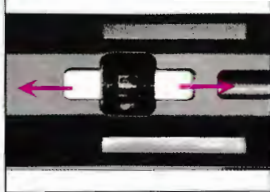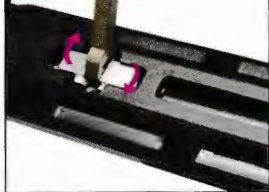

Mount Rail Regulator

- Put the mount rail regulator on the setting position, use the wrench to adjust to the locking position.

 
6 Setting the Foregrip



Mount rail nut



Hexagon socket screw




Hex wrench




- 1 Put hexagon socket screw and Mount rail nut on the foregrip first
- 2 Place the mount rail nut in the foregrip horizontally, lock the hexagon socket screw in the mount rail nut with hex wrench, make sure it fixed on the rail.

7 Setting the Battery

 
1 Cell box1



 
- 1 Press the store release bottom and pull the stock to the end, expose the cover of the battery case.

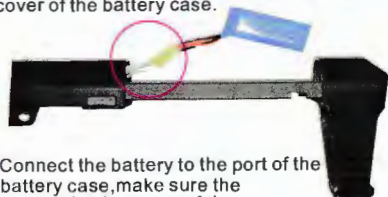

 - 2 Connect the battery to the port of the battery case, make sure the connection is successful.

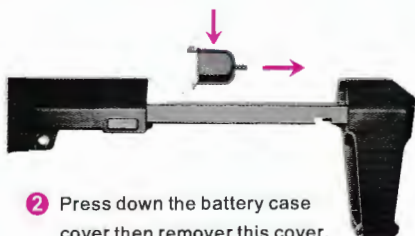


 - 2 Press down the battery case cover then remove this cover.

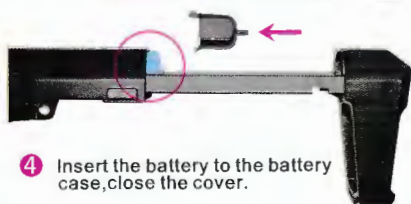

- 4 Insert the battery to the battery case, close the cover.

 2 Cell box2

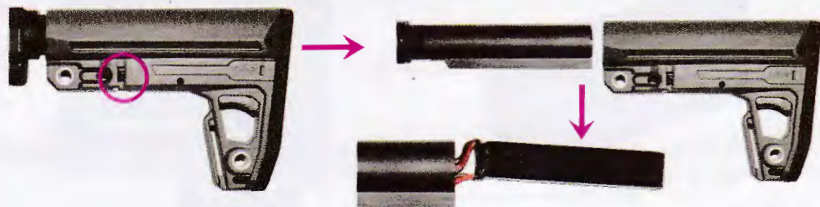

- Press the red circle to take out the cover of the cell box, Connect the battery cable terminals and put it back to the cell box, then close the cover.

 
★ After the battery is installed, needs to move the lever to the "SAFE" position before setting any other operation.

8 Retractable stock

1 Stock



- Press the store release button and pull the stock to the back way

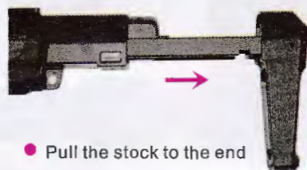


- Pull the stock to the end

2 Stock



 - Press the store release button and pull the stock to the back way

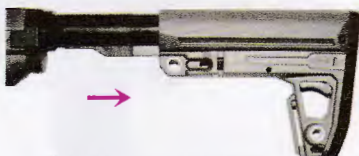

- Pull the stock to the end

9 Setting the Magazine



- 1 Press the magazine release button and take out the magazine.

- 2 Insert the BB bullets with the speed loader. Magazine Capacity 180 Rounds

Speed Loader



Magazine

Warning

Always use the Double Eagle BB Bullet for this air gun. We shall not be responsible for any damage and accidents arising from use of inferior bullets.

Double Eagle BBs
(0.12g) (0.20g)

 
 


Inferior BBs




10 Sight Adjustment


- 1 Push the empress gun sight toward the gun mouth
- 2 The gun sight regulates the knob to left or adjust rightwards, empress the gun sight shoot or so ambulation, can according to the angle carries on regulate.
- 3 This revolves the adjustable top and botton gun sight of knob.

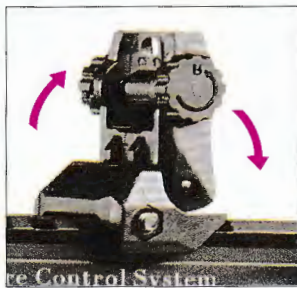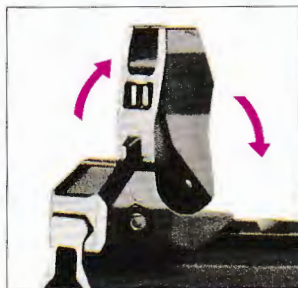

11 Variable Hop Up System

  - 1 Put the cocking Bolt backward and fix it at the end position.
- 2 Locate the Hop-Up Adjustment Knob at the right side of the receiver.
- 3 Slide the Hop-Up Adjustment knob to a desired position.
- 4 .Shoot a few pellets, exam the trajecoty and make further adjustment if necessary.
- 5 .The best positing is where the bullets fly horizontally, and the longest flying distance is obtained.


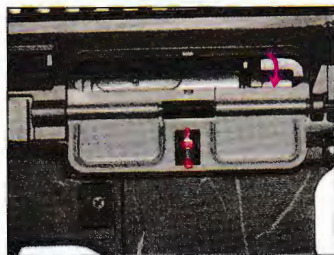


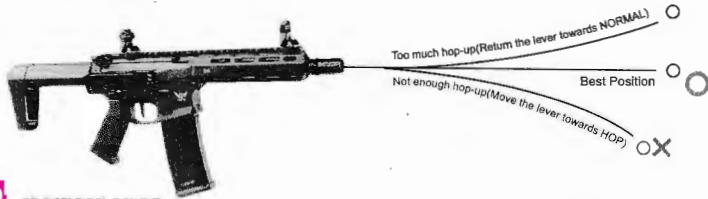

12 Maintenance



1 Maintenance when Bullet Speed Becomes low

  - Apply Oil as shown below, using the cleaning rod and oiled cotton cloth. Insert cleaning rod into the barrel.
- To complete the cleaning, use the cleaning rod (with cotton) as shown below. To remove excess oil.

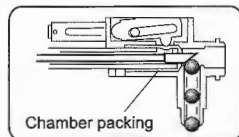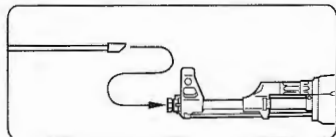

Warning

  
- Always carry out maintenance AFTER returning the hop up lever to the Normal position. (Hop-OFF)

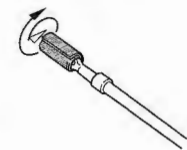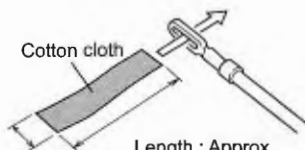

Hold at the leading end of the rod and insert the rod into the barrel while turning the rod.

Width : Approx. 10mm

 Wind the cut cotton cloth.

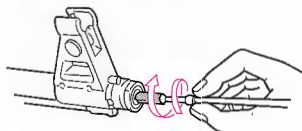

Inserting the rod will be difficult if you hold rod at the end.

2 Removing clogged bullets

- Remove the magazine and return the hop up adjustment to the Normal position.
- Insert the cleaning rod from the load edge of the barrel, be careful so that the angled part of the cleaning rod faces down, and remove clogged bullets.

3 Normal Maintenance

- Keep the rifle in clean condition.
- Never use dirty, damaged or distorted bullets.
- Regularly clean the barrel with soft cleaning rod.

For more information pls visit:

<http://www.deairsoft.com>



@instagram @DE_AIRSOFT



@deairsoft